



SUBJECT:	INSTALLATION GUIDE - PPF TAPE
PRODUCT:	AEROKLAS MODULAR CANOPIES
PART NUMBER:	VARIOUS

Overview

This supplementary instruction provides a guide to applying PPF (Paint Protection Film) tape to the vehicles tailgate.

The film prevents potential paintwork damage caused by canopy seal contact or repeated use.

Models

Aeroklas modular canopies.

Important Safety Information

- Read this guide fully before commencing installation.
- Do not stretch the PPF tape during application.
- Ensure installation is carried out in a dust-free environment.
- If bubbles persist after 24 hours, gently puncture with a fine pin and smooth with the squeegee.

Tools & Material Required

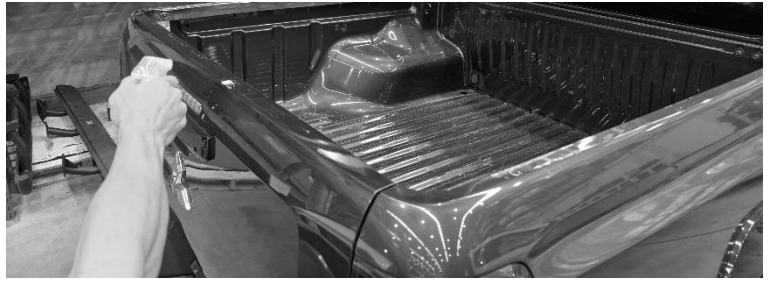
- PPF Tape (Supplied in kit)
- Knife or scissors
- Isopropyl alcohol & clean lint-free cloth
- Plastic squeegee

Estimated Rework Time: 5mins



Preparation

1. Ensure vehicle tailgate surface is clean, cool, and dry.
2. Wash the top surface of tailgate area thoroughly with mild detergent and water.
3. Locate the area where the door seal will contact tailgate.
4. Wipe area with isopropyl alcohol to remove any wax, oil, or contaminants.

**Applying PPF Tape**

1. Position the tape carefully over the intended area.
2. Using a plastic squeegee remove trapped air.
3. Carefully trim any excess tape with knife or scissors.
4. Check for bubbles & reapply squeegee pressure where needed.
5. Allow 24 hours for the tape to bond fully.
6. Do not wash the vehicle during this curing period.

