



Installation Guide

PRODUCT:

FLEXIGLASS CANOPY ROOF RAIL SET

VEHICLE:

FlexiSport, Flexi Sport Premium & Flexi Essential Canopies

PART NUMBER:

RK430

Important Safety Information

- Read this guide fully before commencing installation.
- Installation must be carried out by a qualified technician.
- Wear suitable PPE including gloves, eye protection and dust mask.
- Confirm all parts are present before starting.
- Periodically check that all fasteners remain securely tightened

Load Rating: Refer to Canopy Load Rating

Roof Rails above Canopy Roof: 60mm

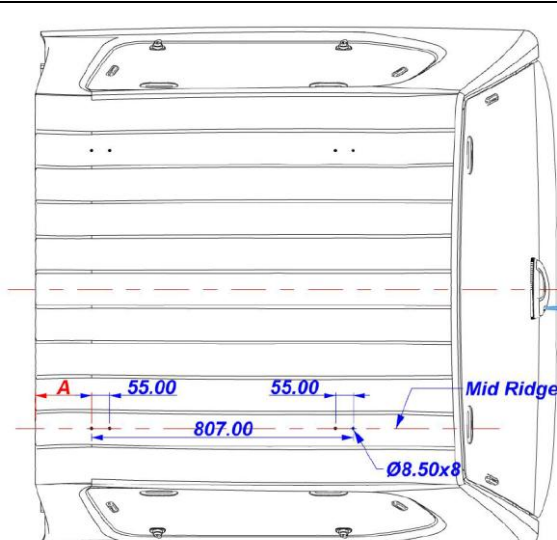
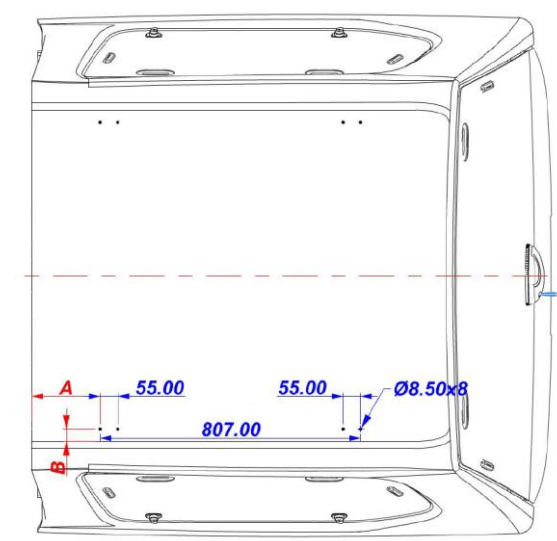
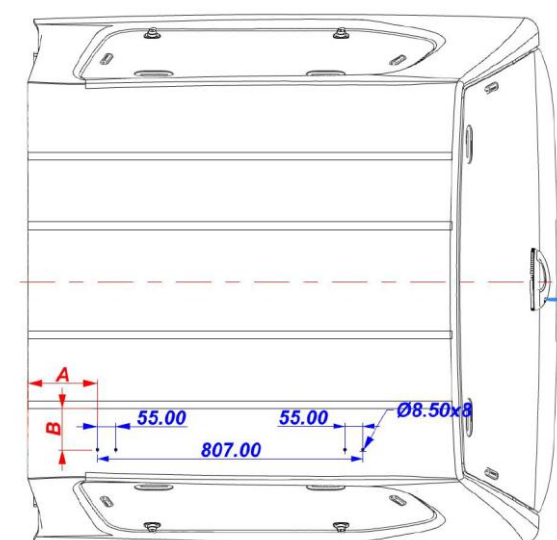
Estimated Installation Time: 20 Minutes

Warranty: [Refer to Flexiglass Website](#)



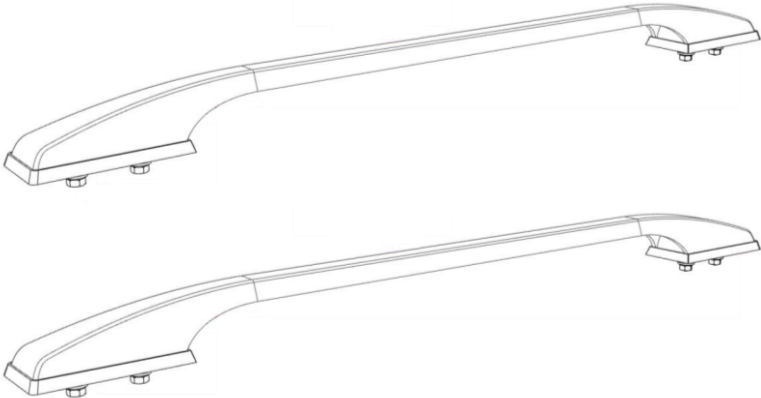
Installation Guide

Drilling Locations for Flexi Essential Canopies

Vehicle	Dimensions
<p>Ford Ranger 2022: A = 250mm</p> <p>Volkswagen Amarok 2023: A = 300mm</p>	
<p>Isuzu D-Max 2024: A = 250mm, B = 70mm</p> <p>Toyota Hilux A Deck 2024: A = 250mm, B = 70mm</p> <p>Toyota Hilux J Deck 2024: A = 250mm, B = 70mm</p> <p>Mitsubishi Triton 2024: A = 250mm, B = 40mm</p> <p>GWM Canon 2024: A = 250mm, B = 50mm</p>	
<p>LDV T60 2018: A = 300mm, B = 150mm</p>	



Installation Guide

What's included		
Qty	Part Description	Image
2	Roof Rail	
4	Rubber Gasket	
8	Rubber Washer	
8	Flat Washer	
8	Spring Washer	
8	Hex Nut	
8	Nut Cover	

Preparation

1. Unbox verify all parts are included.

For FlexiSports & FlexiSports Premium, use existing holes to secure roof rail set & proceed to Step 6.

2. Mask off area on top of canopy to be drilled based on drilling location guide for your vehicle to protect paintwork.



3. Ensure internal space inside canopy is clear prior to drilling.

4. Mark hole positions as per drilling location guide.

Note: Double check hole locations prior to drilling.

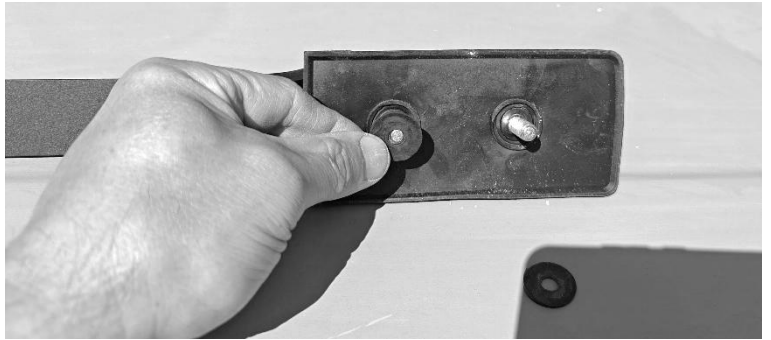
5. Using 8.5mmØ drill, drill at marked locations.





Installation Guide

6. Install rubber gaskets under each roof rail base & rubber washer onto studs.

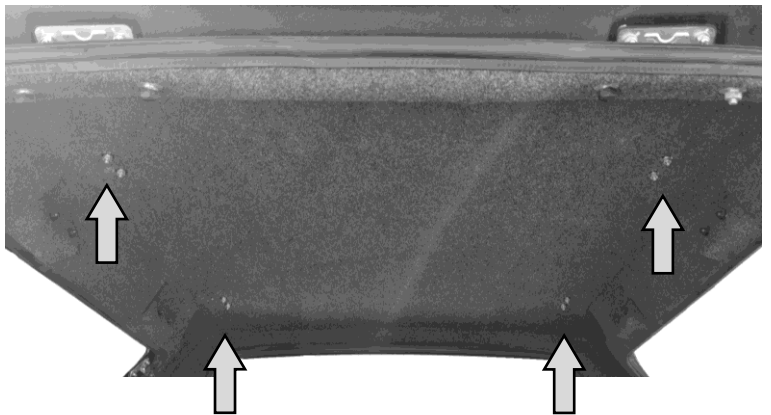


7. Remove masking tape on top of canopy.

8. Set roof rails over the drilled holes on canopy.



9. From inside the canopy, install & lightly tighten using flat, spring washer & nut.



10. Check roof rail position & adjust if required, prior to tighten to **6Nm**.

11. Install nut cover.



12. Clean the canopy surface and vacuum internal area.